



Snowmobile Summer Storage Checklist

Preparation

- Gather all necessary supplies:
- High-quality fuel stabilizer
- Storage / fogging oil (4-stroke ACE engines only)
- Chaincase oil and lubricants
- Battery maintainer
- Breathable snowmobile cover
- Cleaning supplies
- Tools and Ski-Doo owner's manual
- Set up a clean, organized workspace.

Step 1: Cleaning and Inspection

- Wash the snowmobile thoroughly, including the undercarriage.
 - Dry the snowmobile completely to prevent rust.
 - Inspect for damage, wear, or leaks.
 - Repair or replace any damaged components.
-

Step 2: Fuel System Preparation

- Add a fuel stabilizer and run the engine **OR** drain the fuel system completely.
 - For Mini MXZ models, drain the carburetor bowls.
 - For fuel-injected models, follow the owner's manual instructions.
-

Step 3: Engine and Lubrication

- For 4-stroke engines: change the engine oil and filter.
 - For 4-stroke engines: apply fogging oil to the engine cylinders.
 - For 2-stroke engines: follow the "Engine Storage Procedure" in the Owner Manual.
 - Grease all suspension fittings, steering linkages, and axle bearings.
 - Spray exposed metal parts with a corrosion inhibitor.
-

Step 4: Battery Maintenance

- Disconnect the battery (negative terminal first).
 - Clean the battery terminals with a wire brush.
 - Store the battery in a cool, dry place.
 - Connect the battery to a trickle charger or maintainer.
-

Step 5: Track and Suspension Care

- Lift the rear of the vehicle until the track is clear of the ground.
- Do not release the track tension.
- Lubricate all suspension components.

Step 6: Storage Location

- Choose a dry, well-ventilated indoor space OR

If storing outside:

- Use a breathable snowmobile cover.
- Elevate the snowmobile on blocks.
- Use pest repellents to prevent infestations.

Pre-Season Preparation (Optional)

- Check all fluid levels (engine oil, coolant, chaincase oil).
- Inspect the brake system and battery.
- Verify proper lubrication of all components.
- Adjust track tension as needed.
- Start the engine and ensure proper operation.

